
STEP 3 | HOW TO MEASURE GROMMET SPACING



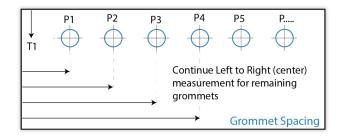


Follow this example to measure the grommet spacing on each of your panels. Grommets are used when you already have metal studs installed along the top of your elevator walls. From our example these are highlighted as yellow circles.

T MEASUREMENT

This is the measurement from the top of the wall to the center of the grommet. This measurement is recorded once as each grommet will be placed at the same "T" level across all of the Elevator Pads.

P MEASUREMENT

This measurement is the grommet placement across the elevator pad. Each grommet location is measured from the left wall to the centre of the stud pin. Left wall to centre of stud *NOT* gromet to gromet.

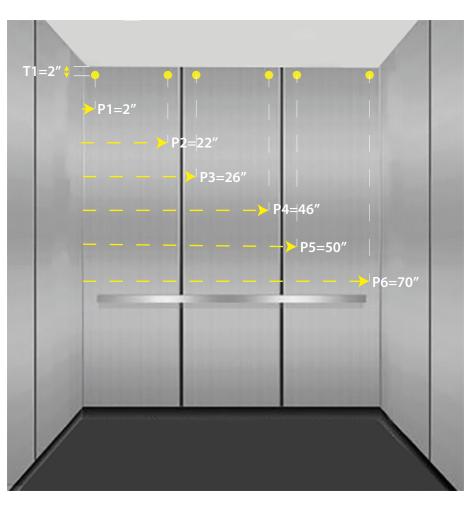

Stud Pins

Many elevators have stud pins pre-installed on the walls. If you would like to install stud pins, FELLFAB® has a selection readily available for sale. These will have to be installed by your service personnel.

FILLING OUT THE ONLINE FORM

Below you will see how to fill out the measurements on the online order form. Please ensure you record the grommet spacing to the correct panel.

Panel Grommets (in inches)												
Top Grommet Cer	2											
Panel	P1	P2	Р3	P4	P5	P6	Р7	Р8	Р9	P10	P11	P12
A	2	22	26	46	50	70						
В												
c												